

Items Needed

Drill

Flathead screwdriver or knife

Replacement Switch



C5 Corvette Power Seat Switch Replacement Instructions

Autoclockrepair.com

We are not responsible for damages caused by installation
Proceed at your own risk



Step 1

Drill into plastic tabs as show

Drill only 1/8" or less to remove plastic tab from base
NO FURTHER





Step 2

With a small flathead screwdriver or knife
Gently pry the 3 tabs on either side from the base



Step 3

Gently separate base from main body
and finish by prying end tabs on either side




Step 3a

Gently separate base from main body



Step 4

Remove and discard old broken metal base

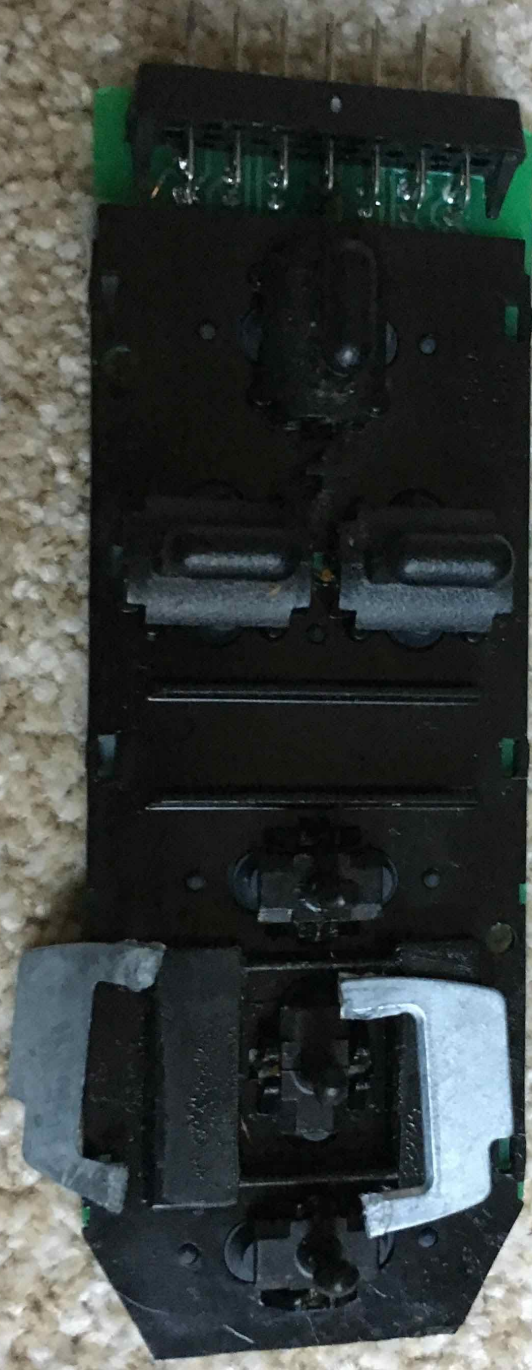

Step 5
Insert and align
new base as shown



Base properly aligned



Step 6

Align switch holes with base, press switch firmly to base mounts





Before closing up,
insure that new switch rotates freely