

1997 - 2001 Honda CRV Clock removal Instructions www.autoclockrepair.com
The vent bezel assembly needs to come out prior to clock removal.

Tools needed:

Phillips Screwdriver

Thin regular screwdriver, butter knife, putty knife

Time Required:

5-10 Minutes

Tips:


1. If you are working in a cold environment you can run the heater to warm up the vents. The plastic is much easier to work with when it is warmed up
2. You can wrap the screwdriver or butter knife end in tape to minimize scratching (not really needed)

Directions:

1. Using a wide, thin blade such as a putty or butter knife, pry the assembly up a little at the bottom until it pops out and slightly then work the sides (see red ovals).



2. Pull the bottom out as it clears, and the top of the vent bezel assembly will follow. The clips holding the bezel in place are shown here. They may pop off during removal so keep an eye out for them.

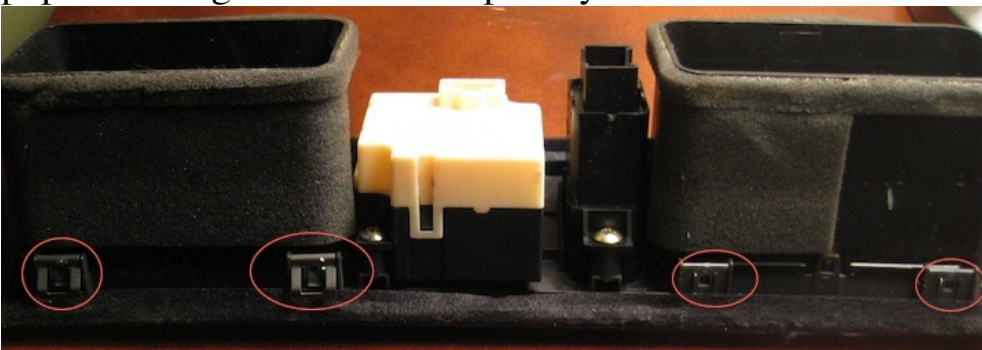

3. Once you have the vent bezel out, remove the electrical plug from the clock.



4. Unscrew the two phillips screws that hold the clock in place.



Send off to www.autoclockrepair.com

Be sure to include a copy of the shipping invoice. Thanks!